



SSD Replacement Instructions

Rev. 1.0
Nov. 29, 2023

SSD Replacement Instructions



Disclaimer

The information contained in this instruction manual is for information purposes only. Primero Games, LLC ("Primero") is not responsible for any errors or omissions, or for the results obtained, from the use of this information. All information in this instruction manual is presented "as is" with no guaranty of completeness, accuracy, or for the results obtained from its use. This instruction manual is not intended to be a safety guide. You must take all safety precautions that you believe are necessary. Your use of this information is at your own risk. This instruction manual is not a product warranty. PRIMERO MAKES NO EXPRESS OR IMPLIED WARRANTY AND DISCLAIMS ALL OTHER WARRANTIES WITH RESPECT TO THE INFORMATION CONTAINED HEREIN.

Symbols Used in This Guide



Indicates a **Note** or tip that the Operator should be aware of or may be helpful during the set up.



Indicates a **Warning** in which the Operator should pay close attention as an error may occur, damage to the machine, software or injury to the Operator may also occur.

Tools and Items Required



Replacement SSD



Screwdriver P1 (Magnetic)



Main Board
(EFCO)
Security Key



Cabinet
Security
(841) Key



Operator
(1247) Key



OPTIONAL Spare Screw:
Machine Pan Head Screw
M3x4mm, Phillips Head

Screw Specs

Thread Size	M3
Thread Pitch	0.5 mm
Length	4 mm
Head Diameter	5.5 mm
Head Height	2 mm
Drive Style	JIS
Material	Zinc Plated Steel
Head Type	Rounded
Head Style	Pan
Threading	Fully Threaded



Note: Items Not Shown to Scale.

 
Version	Author / Contributors	Date	Changes / Comments
1.0	Shawn Lucci – Technical Writer Johnny Davis – Senior Service Technician Chris Ward – Senior Product Specialist	11/29/23	Original Version

SSD Replacement Instructions




Warning: Power Off the Cabinet before opening or removing any internal components. Failure to power off the cabinet may result in damage to the internal components or possible injury.


1. Power down the cabinet.

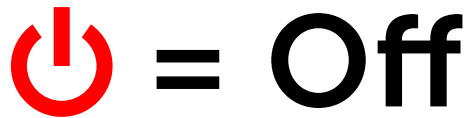

2. Open the Cabinet (841 Key) and the Game Board Box (EFCO Key).

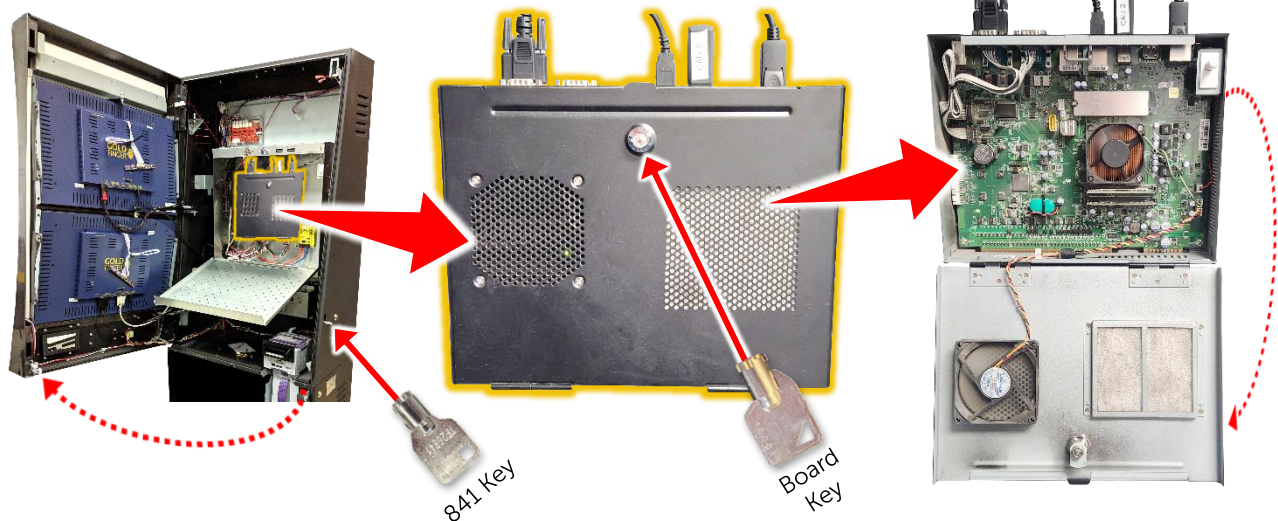

3. Use the P1 Screwdriver to remove the Solid-State Drive (SSD) screw.

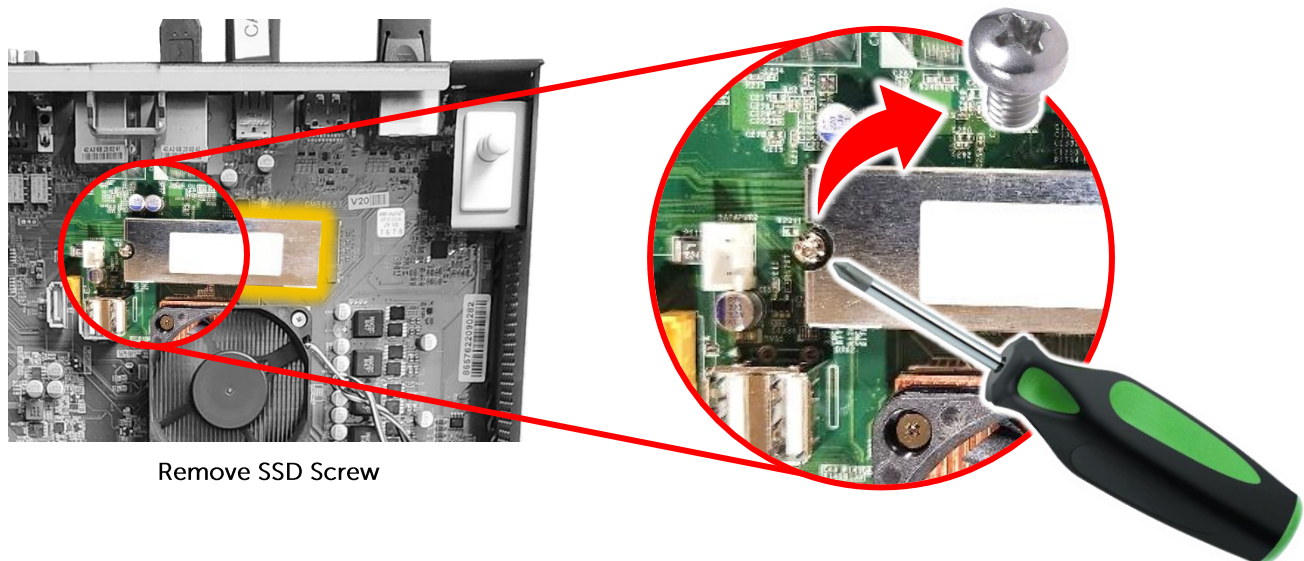

Remove SSD Screw




Warning: The SSD screw is easily lost. Use a Magnetic Screwdriver to prevent loss. If the screw needs to be replaced, use a **Machine Pan Head M3x4mm, Phillips Head** screw.



SSD Replacement Instructions



The SSD will pop up.

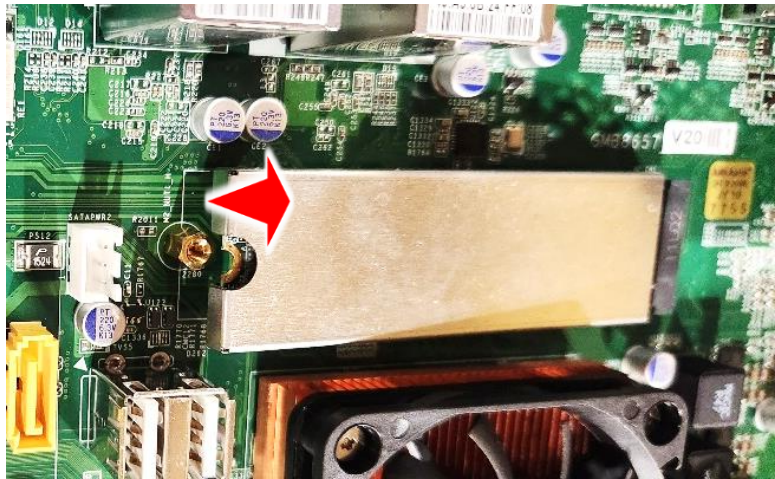

4. Slide the SSD Out from the connectors.

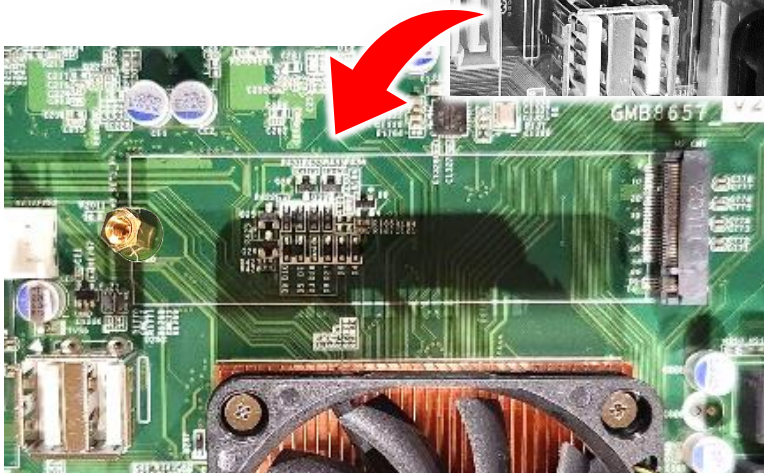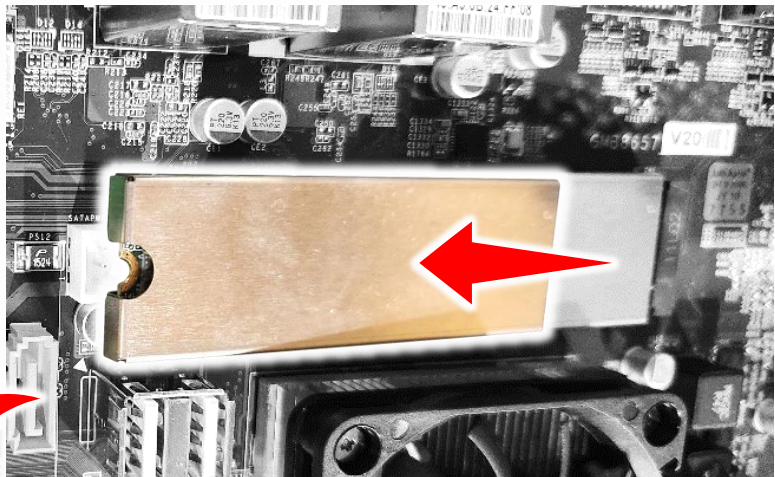


Slide SSD Out

SSD Replacement Instructions



Warning: The SSD screw is easily lost. If the SSD is not being immediately changed, replace the SSD Screw to prevent loss.


If the screw needs to be replaced, use a **Machine Pan Head M3x4mm, Phillips Head** screw.

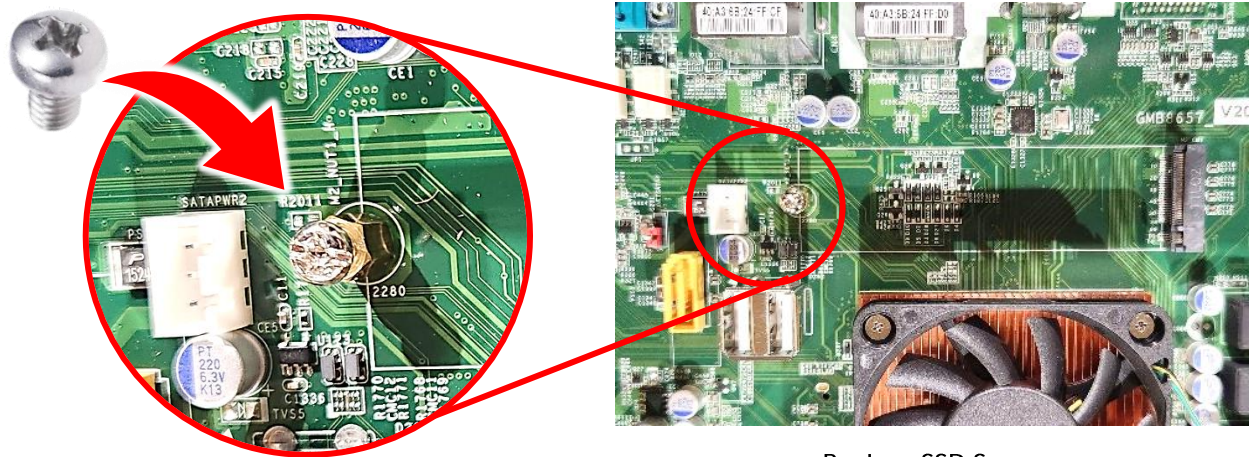

Replace SSD Screw

5. Slide the New SSD into the SSD slot.


Make sure the SSD Pins align with the slots on the Board.

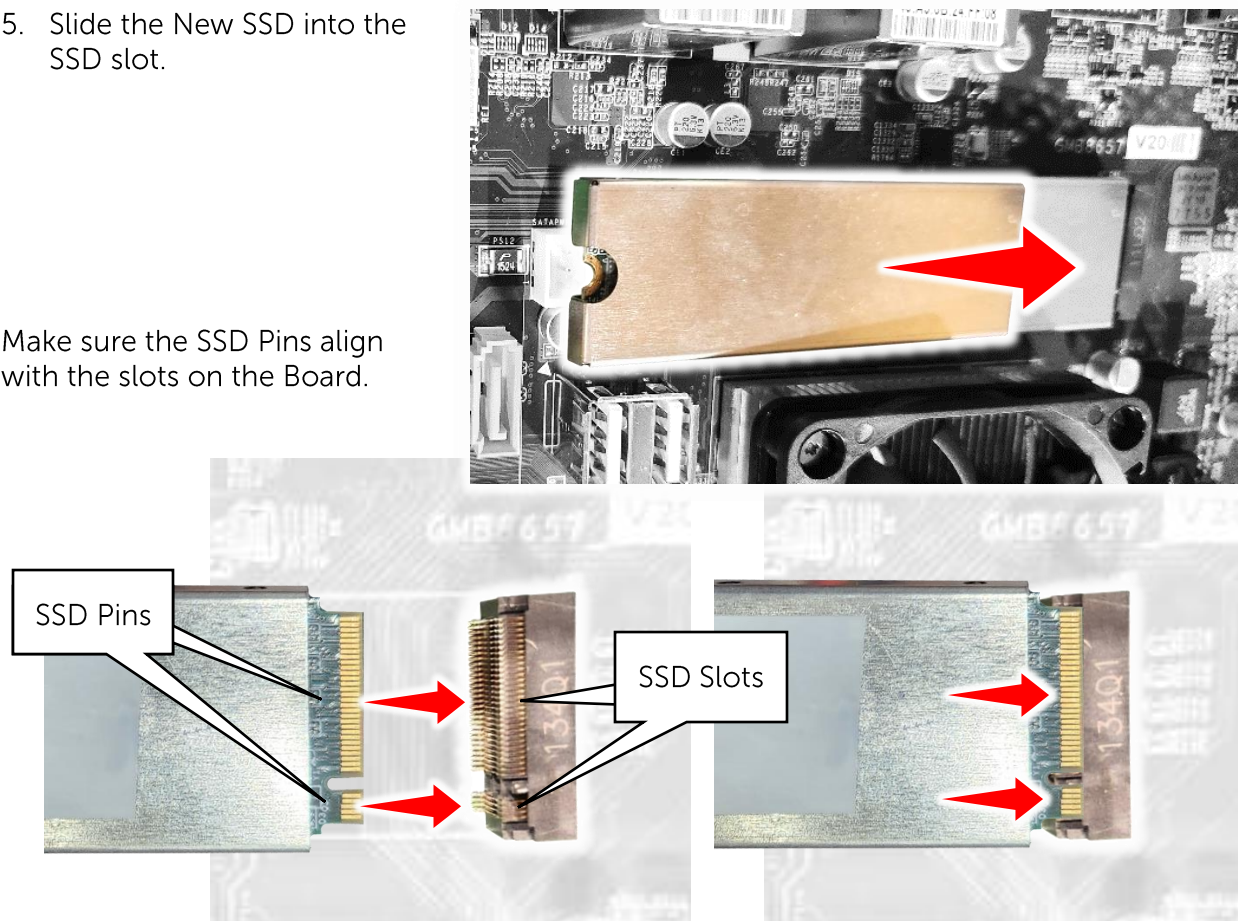


SSD Replacement Instructions




6. Lightly Press the SSD down and into place.

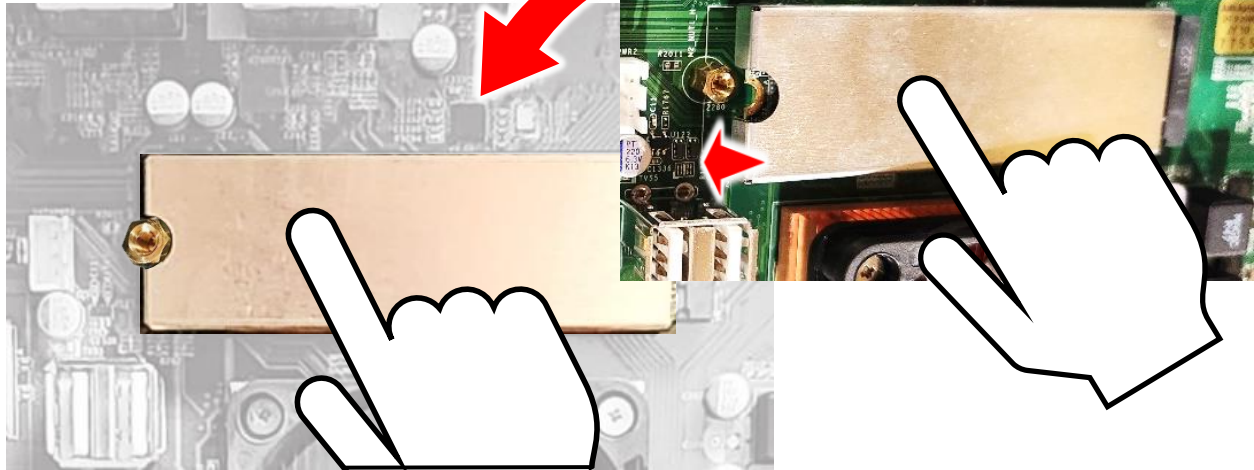

7. While holding the SSD down and in place, use the P1 Screwdriver to replace the SSD Screw.

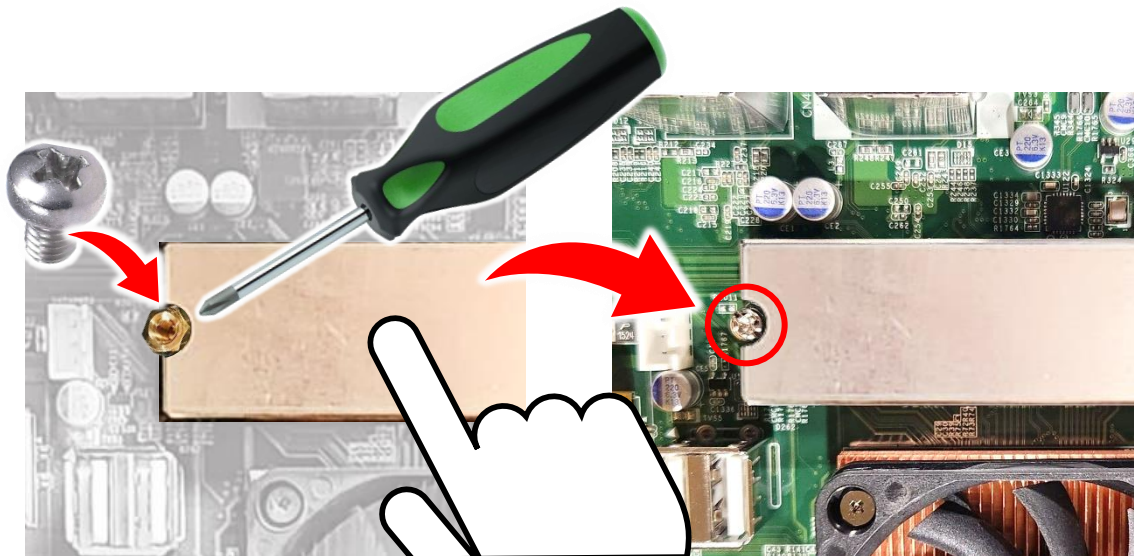

8. Power the Cabinet back on and the Game should Boot up.

 = On






Game Not Activated


In some cases, the Game will show a CAT Status Warning indicating the game is not Activated. If this occurs, the Game will need to be Activated Manually.




1. Insert the Operator Menu (1247) Key into the Operator Menu Lock on the Cabinet to access the Operator Menu.

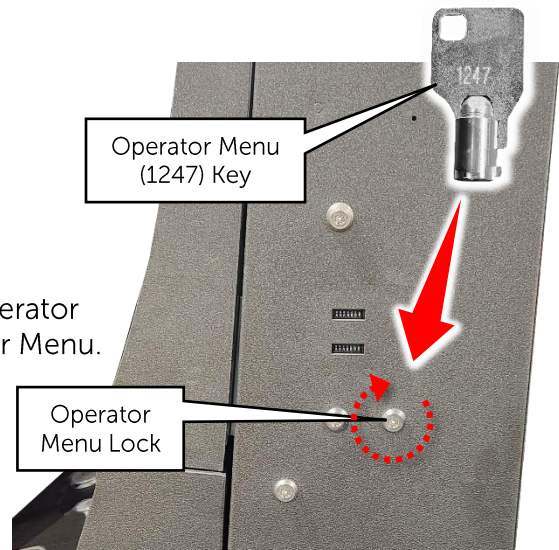

2. Tap Activat Manage.

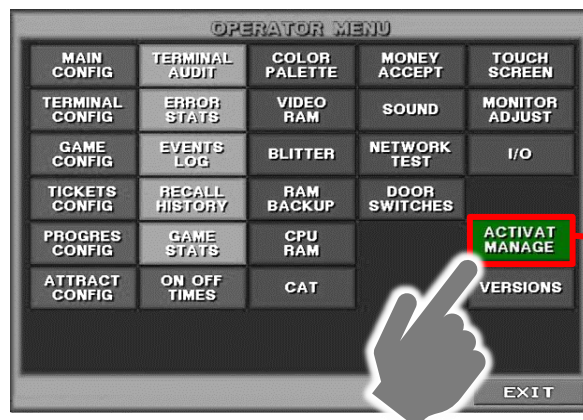

The Activation Management Menu opens.

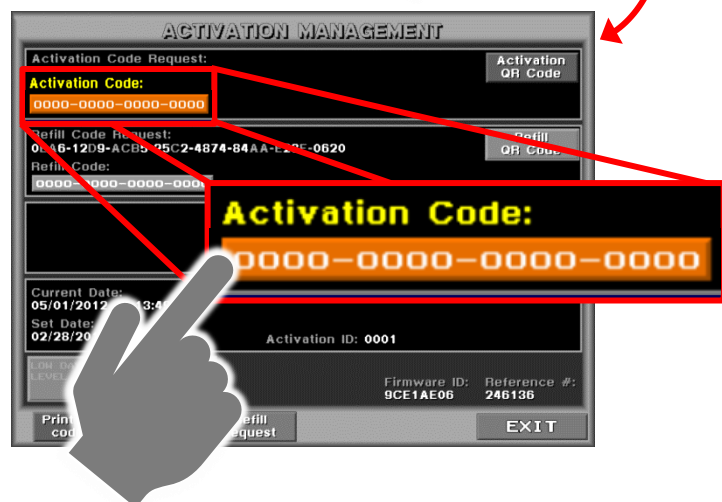

3. Tap the Activation Code

SSD Replacement Instructions




4. Enter the Activation Code on the Keypad and Tap OK.



Note: To acquire an Activation Code, please contact our Support (Fill) line at 404-971-8360.

5. Exit Back to the Game

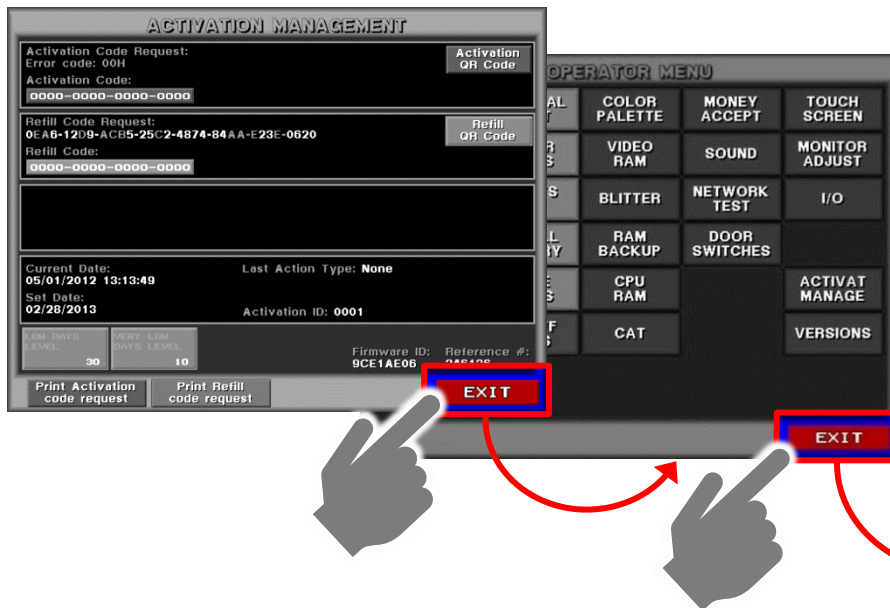

For assistance, please call our **Support** (Fill) line at **404-971-8360**.